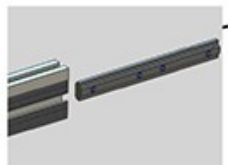



<p>Installation the angle bracket with M6.3*75 tapping screw.</p>			
<p>Fix the rail onto the angle bracket with M8*20 T-bolt.</p>			
<p>Connect two rails with splice bar.</p>			
<p>Adjustable beam installation.</p>			
<p>Connect rail with adjustable beam. Fix L-feet with M8*20 T-bolt onto the rail.</p>			
<p>Loose the inner-hexagon bolt to adjust the height.</p>			
<p>Fix the module with end clamp.</p>			
<p>Upper clamp installation.</p>			
			